2025/10/19 04:44 1/2 Hello Hub V1



Hello Hub V1

The little black box that started it all. Ouad Core ARM.

Status Lights

The face of the Hello Hub (V1) houses 3 status lights.

From left to right when facing the ring-u logo:

(sp)(sp)The **1st Light** turns **red** to indicate power is on.

(sp)(sp)The **2nd Light** blinks **yellow** to indicate network communication.

(sp)(sp)The **3rd Light** is the main status light.

(sp)(sp)(sp)It blinks **blue** when making attempts to contact the ring-u servers,

(sp)(sp)(sp)is solid **green** when it has a successful connection with ring-u,

(sp)(sp)(sp)and occasionally blinks **purple** to indicate that the battery monitoring service is working.

The **3rd Light** can *also* indicate system errors.

(sp)(sp)**Alternating Red and Yellow** indicates that the Hello Hub has encountered an internal software error and needs to be powered off and on again.

(sp)(sp)**An occasional red flash** indicates that the Hello Hub failed to retrieve an update from the ring-u servers. It will try again automatically.

From:

https://wiki.ring-u.com/wiki/ - support wiki

Permanent link:

https://wiki.ring-u.com/wiki/doku.php?id=hello-hub-v1&rev=1654885507

Last update: 2022/06/10 18:25



Last update: 2022/06/10 18:25

https://wiki.ring-u.com/wiki/

Printed on 2025/10/19 04:44