

Hello Hub V1

The little black box that started it all. Ouad Core ARM.

Status Lights

The face of the Hello Hub (V1) houses 3 status lights.

From left to right when facing the ring-u logo:

1st Light turns **red** to indicate power is on.

2nd Light blinks **yellow** to indicate network communication.

3rd Light is the main status light.

- (sp)(sp)It blinks **blue** when making attempts to contact the ring-u servers,
- (sp)(sp)is solid **green** when it has a successful connection with ring-u,
- (sp)(sp)and occasionally blinks **purple** to indicate that the battery monitoring service is working.

The **3rd Light** can *also* indicate system errors.

(sp)(sp)**Alternating Red and Yellow** indicates that the Hello Hub has encountered an internal software error and needs to be powered off and on again.

(sp)(sp)An **occasional red flash** indicates that the Hello Hub failed to retrieve an update from the ring-u servers. It will try again automatically.

(sp)(sp)Cycling Colors (blue, green, red) indicates hub stuck in a boot loop. (sp)(sp)Solid Red indicates the Hello Hub can not get past the firewall. A firewall reboot usually clears this error.

Last update: 2023/03/17 14:06

From:

https://wiki.ring-u.com/wiki/ - support wiki

Permanent link:

https://wiki.ring-u.com/wiki/doku.php?id=hello-hub-v1&rev=1679061963

Last update: 2023/03/17 14:06



https://wiki.ring-u.com/wiki/ Printed on 2025/10/19 04:41