

# Getting to Know the Keypad - GRP2614, GRP2615, GRP2616

## GRP2614



## GRP2615



## GRP2616



### GRP2614 / GRP2615 / GRP2616 Keypad Buttons

Icon	Button	Function
	<b>Contacts</b>	Press to view and edit contact information.
	<b>Hold</b>	Press to put call on hold or resume the call.
	<b>Mute</b>	Press to mute or unmute the call.
	<b>Headset</b>	Press to switch to Headset mode.
	<b>Message</b>	Press to access Voicemail messages.
	<b>Transfer</b>	Press to transfer call.
	<b>Conference</b>	Press to conference call.
	<b>Speaker</b>	Press to use speaker phone.
	<b>Send/Redial</b>	Press to send call or redial.
	<b>Volume</b>	- (left) decreases volume / + (right) increases volume.
	<b>Navigation keys (4)</b>	Navigate menu options. When on idle screen, press up for 3 seconds to display IP info.
	<b>Menu</b>	Press to access menu.

From:

<https://wiki.ring-u.com/wiki/> - **support wiki**

Permanent link:

<https://wiki.ring-u.com/wiki/doku.php?id=keypad-2614-16&rev=1676559105>

Last update: **2023/02/16 14:51**

