

# SNOM PA1+ Manual Config

## SNOM PA1+



Under the Advanced menu tab on the left, pick the SIP/RTP tab and page down to the bottom:



From:  
<https://wiki.ring-u.com/wiki/> - **support wiki**

Permanent link:  
<https://wiki.ring-u.com/wiki/doku.php?id=manual-config:snom-paplus&rev=1708539052>

Last update: **2025/11/02 18:50**

