

## Connecting to WiFi (GRP2614, 2615, 2616)

**To connect the these models to a Wi-Fi Network, please follow the steps below:**


1. From the Home Screen, press the Round button between the 4 arrow buttons, and navigate to **System** → **Wi-Fi settings**.



2. Set Wi-Fi to **Enabled** and press **Save** button.



 Select **Scan**. The device will automatically start scanning for Wi-Fi access points within range.

 4. A list of available Wi-Fi networks will be displayed. Select the desired network.

 5. If required, enter the WiFi network password to connect.

6. An incorrect password will trigger an error message “Cannot connect to the selected network”.  
GRP261X/GRP2624/GRP2634 User Guide

Version 1.0.5.93

Page | 98

- If the connection is successful a “Wi-Fi NetWork Connected” message will display on screen

Figure 86: Failed/Successful Wi-Fi connection

7. Check the Wi-Fi icon on idle screen to verify if the Wi-Fi network is properly connected Figure 87: Wi-Fi Status 8. A new section “Current Connection” will show under System → Wi-Fi settings. Figure 88 : Current connection 9. Selecting “Scan”, Users may choose to “Forget” the current connection and establish a new one.

From:  
<https://wiki.ring-u.com/wiki/> - support wiki

Permanent link:  
<https://wiki.ring-u.com/wiki/doku.php?id=wifi-2614-16&rev=1676482791>

Last update: **2025/11/02 18:50**

