



# Headsets - Wired and Bluetooth

## Wired

The GRP2614, GRP2615, & GRP2616 phones support normal RJ11 headset and Plantronics EHS headsets. To use a Plantronics EHS headset:

1. Go to the **Phone Menu > Preferences > Audio Control: Headset Type**.
2. Select **Plantronics EHS** then reboot the phone.
3. Connect Plantronics EHS Headset into the RJ11 headset port on the back of the phone.
4. To use headset mode, press headset button . A headset icon  will show on the LCD.

**Please Note** - Ear buds and headsets with noise cancelling will not work.



## Bluetooth

GRP2614, GRP2615, & GRP2616 phones also connect to Bluetooth headsets (Bluetooth version 5).

To connect to a Bluetooth device, turn on the Bluetooth radio first.



The first time using a new Bluetooth device, it will have to be paired with the phone so that both devices know how to connect securely to each other. After that, the devices will simply connect. Bluetooth related settings are found at **Phone Menu → System → Bluetooth**.

There are two ways to pair the GRP2614/GRP2615/GRP2616 using the Bluetooth feature:

### I. From the GRP261X

1. Select **Start Scan** to search nearby Bluetooth devices.



2. Choose a device then select **Pair**. The phone will then start the pairing process.



3. If the pairing succeeds, **Connected** will display next to the name of the Bluetooth device.



### II. From the Bluetooth Device

1. Make sure the Bluetooth is powered on and shows **Discoverable** under **Bluetooth Status**.



2. Press **Yes** to accept the **Pairing Request**.



From: <https://wiki.ring-u.com/wiki/> - support wiki

Permanent link: <https://wiki.ring-u.com/wiki/doku.php?id=wired-and-wireless-headsets-2614-16&rev=1676579283>

Last update: 2023/02/16 20:28

