

Guest Phone Setup

Useful for lobbies, an elevator, or any place you want to give an individual the ability to call in/out to a certain phone number or inside the network extension.

In the Atcom A20W phone webpage (reached by accessing the IP address of the phone through any web browser) underneath the “Phone” header, and the “features” sidebar, you would designate a “hotline number” for the phone to dial for any time the phone is physically lifted from the base.

We have found that by setting the “hotline timeout” to 0 creates a phone extension that is not capable of dialing any other number than what was designated in the “hotline number” field.

Currently this is the easiest way to configure a guest phone, new ways will be added when they are available.

From:

<https://wiki.ring-u.com/wiki/> - **support wiki**

Permanent link:

https://wiki.ring-u.com/wiki/doku.php?id=guest_phone



Last update: **2020/06/08 11:17**